


Controls

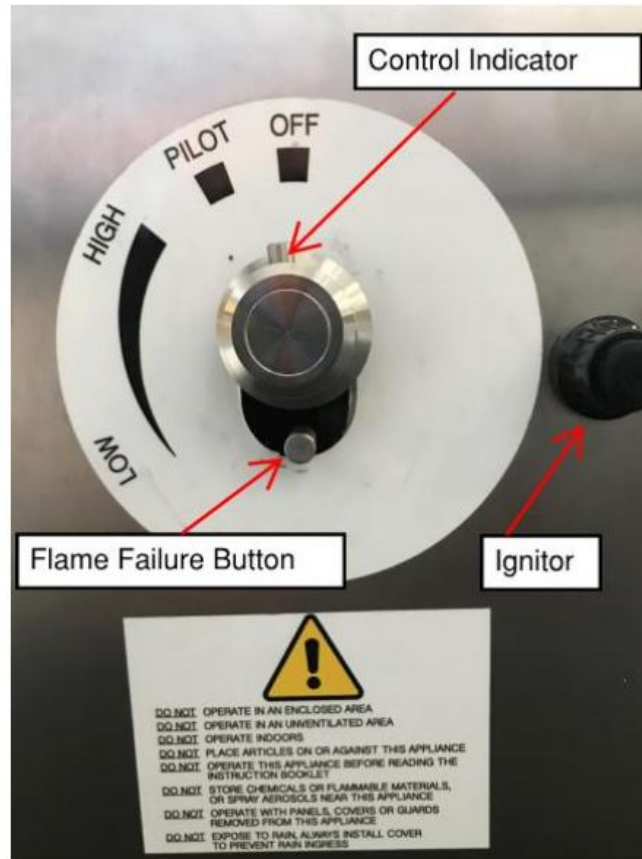

Operating your FirePit – Natural Gas or Reticulated LPG Supply

1. Turn gas control to pilot position
2. Depress ignition button and hold
3. Depress gas control and hold for 30 seconds. Look through site glass to see if pilot is alight. (If pilot is not alight, wait 60 seconds and repeat this step)
4. Turn the control to the high position then depress the flame failure button for 10 seconds (Gas will start to flow through the main burner and the flame will ignite, if the main burner does not ignite, turn the control knob to the off position and begin again at step 1.)

WARNING: Never use naked flames to test for leaks.
Never leave the fire pit unattended while in operation

Always turn the control knob to the off position when not using the fire pit